

# MT2090 Setup

The Motorola MT2090 is a Bluetooth/WiFi wireless Barcode scanner capable of scanning most formats of Barcode used to identify tapes.



The MT2090 can be connected:

1. Directly to a PC via a USB Synapse,
2. Paired directly with a PC via a Bluetooth connection, or
3. Paired with a pairing cradle unit, which then connects to a PC via a USB Synapse.

It is recommended that a pairing cradle be used as this allows wireless flexibility without the technical overhead of having to pair the scanner directly to a PC via Bluetooth (many corporate PCs also don't have Bluetooth adapters).

## Components

The recommended setup for a MT2090 is:

1. MT2090 Scanner: Part Number MT2090-SL0D62370WR
2. Bluetooth Pairing Cradle: Part Number STB2078-C10007WR

# Scanner Features



## Cradle Cables

The STB2078-C10007WR cradle has two cable connections:

- **A** power adapter cable to 110/240V power source.
- **B** USB synapse connector to PC.



## Auto Enter

By default the scanner **will not** send an enter after each scan.

To enable auto-enter, scan the following Barcodes.



[technote](#), [barcode](#), [scanner](#), [zebra](#)

From:  
<https://rtfm.tapetrack.com/> - **TapeTrack Documentation**

Permanent link:  
[https://rtfm.tapetrack.com/barcode/mt2090\\_setup](https://rtfm.tapetrack.com/barcode/mt2090_setup)

Last update: **2025/01/21 22:07**

