

MT2090 Setup

The Motorola MT2090 is a Bluetooth/WiFi wireless barcode scanner capable of scanning most formats of barcode used to identify tapes.

The MT2090 can be connected:


1. Directly to a PC via a USB Synapse,
2. Paired directly with a PC via a Bluetooth connection, or
3. Paired with a pairing cradle unit, which then connects to a PC via a USB Synapse.

It is recommended that a pairing cradle be used as this allows wireless flexibility without the technical overhead of having to pair the scanner directly to a PC via Bluetooth (many corporate PCs also don't have Bluetooth adapters).

Components

The recommended setup for a MT2090 is:

1. MT2090 Scanner: Part Number MT2090-SL0D62370WR
2. Bluetooth Pairing Cradle: Part Number STB2078-C10007WR

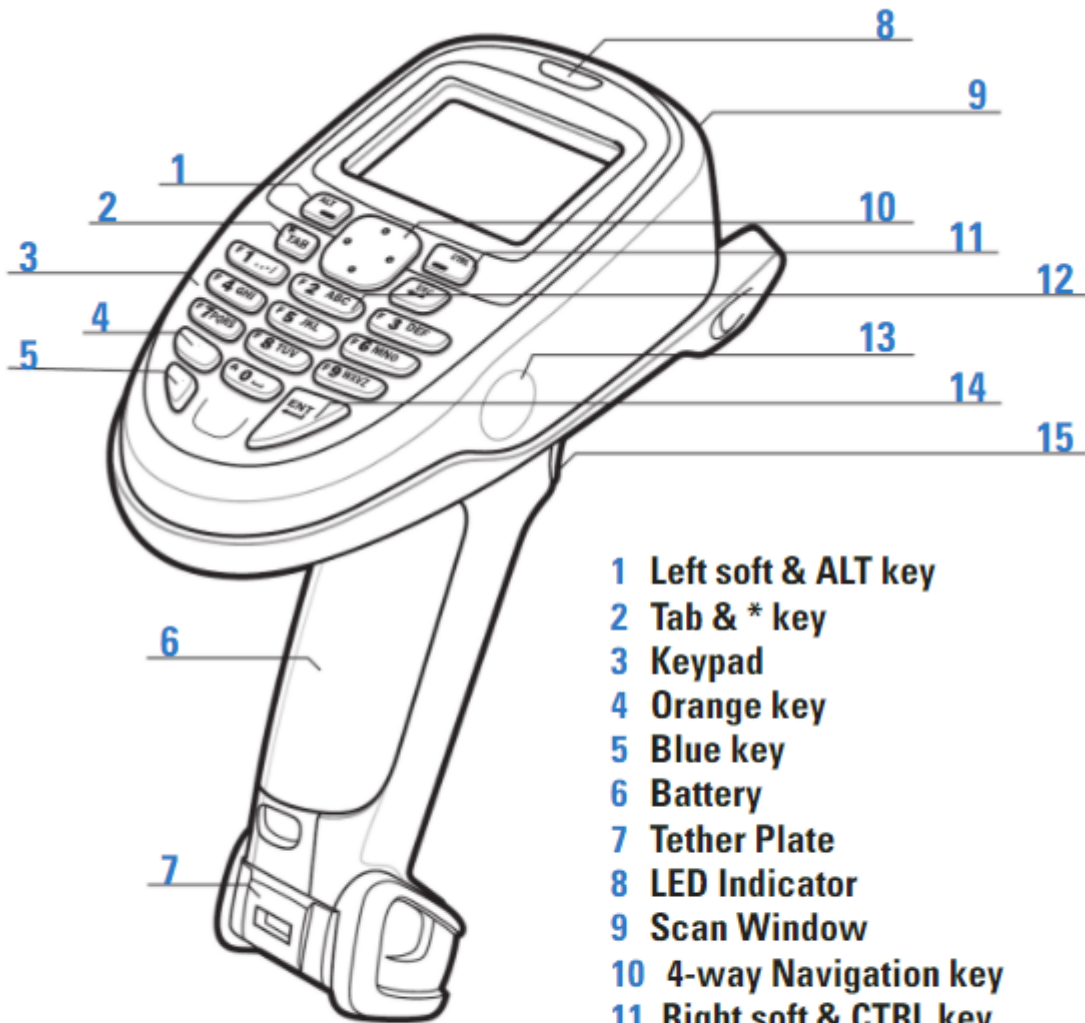

- 1 Left soft & ALT key
- 2 Tab & * key
- 3 Keypad
- 4 Orange key
- 5 Blue key
- 6 Battery
- 7 Tether Plate
- 8 LED Indicator
- 9 Scan Window
- 10 4-way Navigation key
- 11 Right soft & CTRL key
- 12 Cold boot trigger
- 13 LED Indicator (MT2090 Only)
- 14 Enter key
- 15 Scan Trigger

Enter

A screenshot of the scanner's display. It shows three barcode options. Option 1 is a standard barcode. Option 2 is a barcode with the text '<DATA><SUFFIX>' below it. Option 3 is a barcode with a red circle containing the number '3' next to it. The text 'SCAN OPTIONS' is visible between the first and second barcode options.

From:
<https://rtfm.tapetrack.com/> - **TapeTrack Documentation**

Permanent link:
https://rtfm.tapetrack.com/barcode/mt2090_setup?rev=1498251852

Last update: **2025/01/21 22:07**

